

WARNING!


Read these instructions **FULLY** before use.

Installation should only be carried out by a **COMPETENT** installer.

Description

This range of tubular motors is designed for operation of shutters and grilles with a low duty cycle (e.g. shop fronts which are opened in the morning and closed at night). Therefore as a precaution they have an embedded thermal trip to prevent overheating.

1. Preparation of End Plates

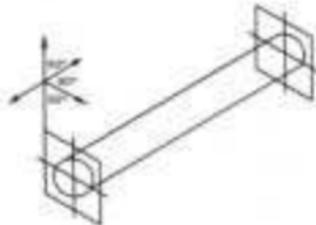

CAUTION


Take care of ensure the tube assembly is horizontal when fitted.

Note -

If the assembly is fitted incorrectly when the unit is put into operation, excessive forces will be put on the tube motor gearbox resulting in damage to the unit.

Wiring Diagram: Neco Euro-Drive 120-160 Series

All operators must be connected via fused supply and protected with a suitable rated fuse.

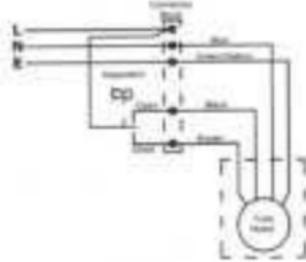


WARNING!

This Product **MUST** be earthed.

Do not connect two or more motors in parallel.


Limits Switch

The tubular gearmotors have integral electro-mechanical limit switches that cut off the power at a position corresponding to the Fully Open & Fully Closed positions on the door. The limit switch **MUST** be set.

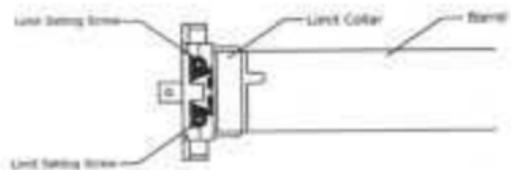

Limit Setting Instructions: Neco Euro-Drive 120-160 Series

- Electrically connect the tube motor as shown previously.
- Disconnect the roller shutter from the tube.
- Operate the rocker switch and check the direction of rotation, if need be, reverse the 'grey' and 'black' wires to correct the direction of rotation.
- Lower the roller tube until the motor stops automatically.
- While pressing the lower limit button, turn the lower end adjustment screw anti-clockwise (-) until the roller tube is in a suitable position for attaching the roller shutter.
- Fix the roller tube on the tube.
- Raise the roller shutter/crawling until the motor stops automatically.
- While pressing the up-limiter, turn the upper end nut/adjustment screw anti-clockwise (-) until the roller shutter/crawling reaches the highest position required.

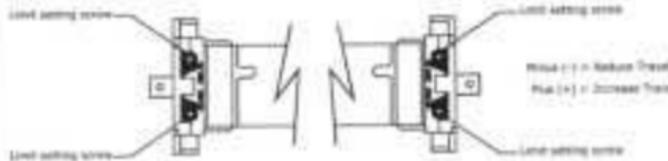

WARNING!

- Do not use freely long screws to attach the roller shutter to the tube.
- Do not use the manual override (if applicable) prior to setting the limit switches.
- Do not use power tools to adjust the limit position. Only use the tool supplied.
- The clearance between the drive adaptor and inside diameter of tube should not exceed 3mm.
- Do not hose the motor with water.
- Do not use excessive force to insert the tube motor into the roller tube.
- If your motor stops working, wait for approx 20 mins to allow the tube unit before future operation.