PARAMOUNT MOTOR ULT RANGE

These Motors should be installed in accordance with the current requirements for electrical installation and must not be used for any other purpose than the incorporation into a roller shutter installation.

Periodic inspection and maintenance of motor assembly and installation is recommended.

These motors are not intended for use in explosive atmospheres.

Caution Motor body will become hot to touch if motor is operated excessively.

Noise- The current airborne noise emission is less than 70dB. (A)

These motors MUST be earthed.

PARAMOUNT MOTOR ULT RANGE

MAINTENANCE PROCEDURE SAFETY

Monthly

Visually inspect installation for damage to door components that might put a strain on the motor.

6 Monthly

Lubricate drive chain and check for wear. Test hand chain operation.

Annually

Ensure electrical terminals in starter and motor are secure. Check motor mounting bolts are secure.

Spare parts and repair advice available at Paramount 26 Ltd.