

Paramount

- ROLLER SHUTTERS
- STEEL DOORS

- ROLL FORMED SECTIONS
- MOTORS & COMPONENTS

Usage instructions of Security Door Keys

The method and sequences when use:

1. There are three different kinds of keys with different function.
2. The plastic handle of Key A is blue, there two A keys. Key A is for house improvement and lease use.
3. Key B with its black handle is a host key. There are 5 B keys. Keys B should be kept and used by householder.
4. The brand and the text "one-off key" is printed on the C key. One side is slotted, please pay attention to the orientation when using.
5. During the house improvement, both keys A and B can be used independently. They are compatible.
6. After the house improvement, please withdraw key A (black) and activate Key C meanwhile. (Note: Key C should be used both on outside door and inside door for two-open lock so as to avoid Key A not working outside while working inside). Inset key C aiming at the hole of lock core, turn several circles and then extract key C, key A will completely go out of effect. (The householders should make sure that key A is really not effective, otherwise please continue turning key C, then extract and check again. Continue this until Key A becomes completely ineffective).
7. Key C is for "one-off" use only. It should be kept properly after use. (Do not use it as everyday keys).

Attention: DO NOT use Key C first as Key A will go out of effect immediately.